
VAISALA

Choose the Right Dew Point Instrument for Optimized Compressed Air Quality

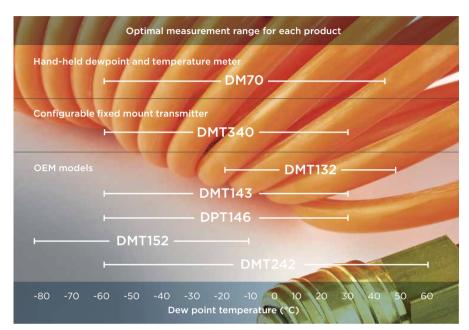


We have taken the stress out of ensuring dry compressed air – here you can find the optimal instrument whatever your application.

Our unique sensor technologies cover the full dew point range with optimized instruments for practically any compressed air system. What are your system's critical dew points? Demand or supply side? Special application and instrument requirements? Relax, increasing the life of your compressed air system, improving process quality and lowering costs is now easier than ever. Vaisala DRYCAP® and HUMICAP® sensor technologies ensure accurate,

reliable measurements with excellent long-term stability and fast response. All Vaisala sensors withstand exposure to contaminants like water spikes, ambient humidity, compressor oil and chemical impurities. They also have the fastest wet-to-dry response time on the market and minimal drift that allows for a long 2-year calibration interval.

The DRYCAP® polymer sensor technology incorporates unique innovations such as the patented auto-calibration feature. This autocalibration maintains the specified accuracy by warming the sensor at set intervals to indicate a possible offset drift to the measurement electronics for automatic correction.

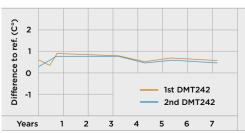

Long-term stability

Graphs derived from an ongoing Vaisala DRYCAP' test. Two DMT242 dewpoint transmitters were installed in a compressed air line seven years ago and have not been recalibrated or adjusted. The line conditions are representative of instrument air. The x-axis represents years and the y-axis represents difference to the reference value -50°C at periodic checks.



Hand-Held DM70 Meter for Spot-Checking and Field Calibration

-60...+60 °C (-76...+140 °F) T_d with ±2 °C (±3.6 °F) accuracy

- · Fast response just minutes
- · Easy-to-use
- · Multilingual menu (EN, CN, DE, FI, FR, JP, RU, SE, SP)
- Data logging and transfer to a PC via MI70 Link software
- Compatible with DMT132, DPT146, DMT143, DMT242, DMT152, DMT340

Read more at www.vaisala.com/DM70



Configurable fixed mount DMT340 Transmitters

-60...+45 °C (-76...+113 °F) $T_{\rm d}$ with ±2 °C (±3.6 °F) accuracy

Configurable with various options

- · Display/keypad
- · Data logging and Relay module
- · Multiple probe option
- Integrated data logging with over four years of measured history
- Multilingual menu (EN, CN, DE, FI, FR, JP, RU, SE, SP)
- · Pressure up to 50 bar
- · DRYCAP® sensor technology

Read more at www.vaisala.com/DMT340













-20...+50 °C (-4 ...+122 °F) T_d

- · Affordable, yet highly accurate: ±1 °C (±1.8 °F) in refrigerant dryer measurement range
- · Excellent long-term stability resistant to compressor oil
- · Low powered, 10...28 VDC
- · Pressure up to 20 bar
- · HUMICAP® sensor technology

Read more or download the datasheet at www.vaisala.com/DMT132

DMT143 Miniature Dew Point Transmitter

-60...+30 °C (-76...+86 °F) T_d with ±2 °C (±3.6 °F) accuracy

- · Small size for compact industrial dryer applications
- · Stable and cost-efficient
- · LED alarm for exceeded dew point level
- · Pressure up to 50 bar
- DRYCAP® sensor technology

Read more or download the datasheet at www.vaisala.com/DMT143

DPT146 Transmitter with Integrated Pressure Measurement

-60...+30 °C (-76...+86 °F) T_d with ±2 °C (±3.6 °F) accuracy

- The first transmitter with combined dew point and pressure measurement
- Compatible with Vaisala Hand-Held DM70 for easy spot-checking, local display and data logging
- · Pressure up to 10 bar
- · DRYCAP® and BAROCAP® sensor technology

Read more or download the datasheet at www.vaisala.com/DPT146

DMT242 Transmitter for Industrial Dryer Applications

-60...+60 °C (-76...+140 °F) T_d with ±2 °C (±3.6 °F) accuracy

- · Sensor options for desiccant and refrigeration dryers
- · Pressure up to 20 bar
- DRYCAP® sensor technology

Read more or download the datasheet at www.vaisala.com/DMT242

DMT152 Transmitter for Low Dew Point Measurement

-80...-10 °C (-112...+14 °F) T_d with ±2 °C (±3.6 °F) accuracy

- Measurement range down to -80 °C (-112 °F)
- · Pressure up to 50 bar
- · DRYCAP® sensor technology

Read more or download the datasheet at www.vaisala.com/DMT152

Accessories

Sampling cells

DMT242SC Basic sample cell

DMT242SC2 Sample cell with swagelok 1/4" male connectors DSC74 Sample cell with quick connector and leak screw

DSC74B Two-pressure sampling cell

DSC74C Two-pressure sampling cell with coil

BALLVALVE-1 Ball Valve Set

- Nokeval 301 and 302 loop powered displays 4-20mA, field enclosure (Model 302 with two alarm relays)
- Connection cables
- Services

other information available at www.vaisala.com/compressedair

Animations, white papers and

More information



For local contact details, please visit www.vaisala.com/contact or send your request to sales@vaisala.com



Ref. B211208EN-C ©Vaisala 2012
This material is subject to copyright protection, with all copyrights retained by Vaisala and its individual partners. All rights reserved. Any logos and/or product names are trademarks of Vaisala or its individual partners. The reproduction, transfer, distribution or storage of information contained in this brochure in any form without the prior written consent of Vaisala is strictly prohibited. All specifications — technical included — are subject to change without notice.